



OWNERS MANUAL



OWNERS MANUAL PHYSIO I

Hello and welcome as owner of a ■tarsus■ Physio therapy table. This manual is for the model Physio I. Please read the manual thoroughly so that you handle the product properly. If you have any specific questions, we would be delighted to hear from you.

Greetings from us at ■tarsus■.

Content

- I. Specification of accessories
- II. Description of functions
- III. Maintenance & cleaning
- IV. Description, technical documentation
- V. Exchange of components

The table should be used for treatment of patients only, with the patient lying or sitting. For maximum life of the product, make sure that no sharp objects cut the artificial leather of the pads, and that the wooden sheets and the aluminum frame is not overloaded.

OBSERVE! The operator MUST read this owner's manual thoroughly, before using the product, to avoid unnecessary risks for both patients and operators.

Postal address

Myrängsvägen 8
SE-891 50 Örnköldsvik
SWEDEN

Phone

+46 660 842 51

Fax

+46 660 180 00



Web site

www.tarsus.se

E-mail




info@tarsus.se

I. Specification of accessories

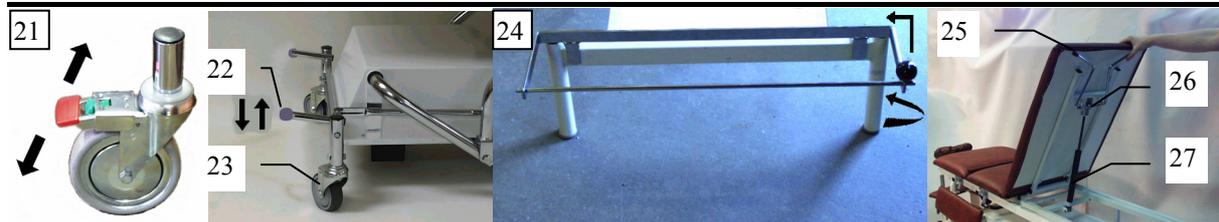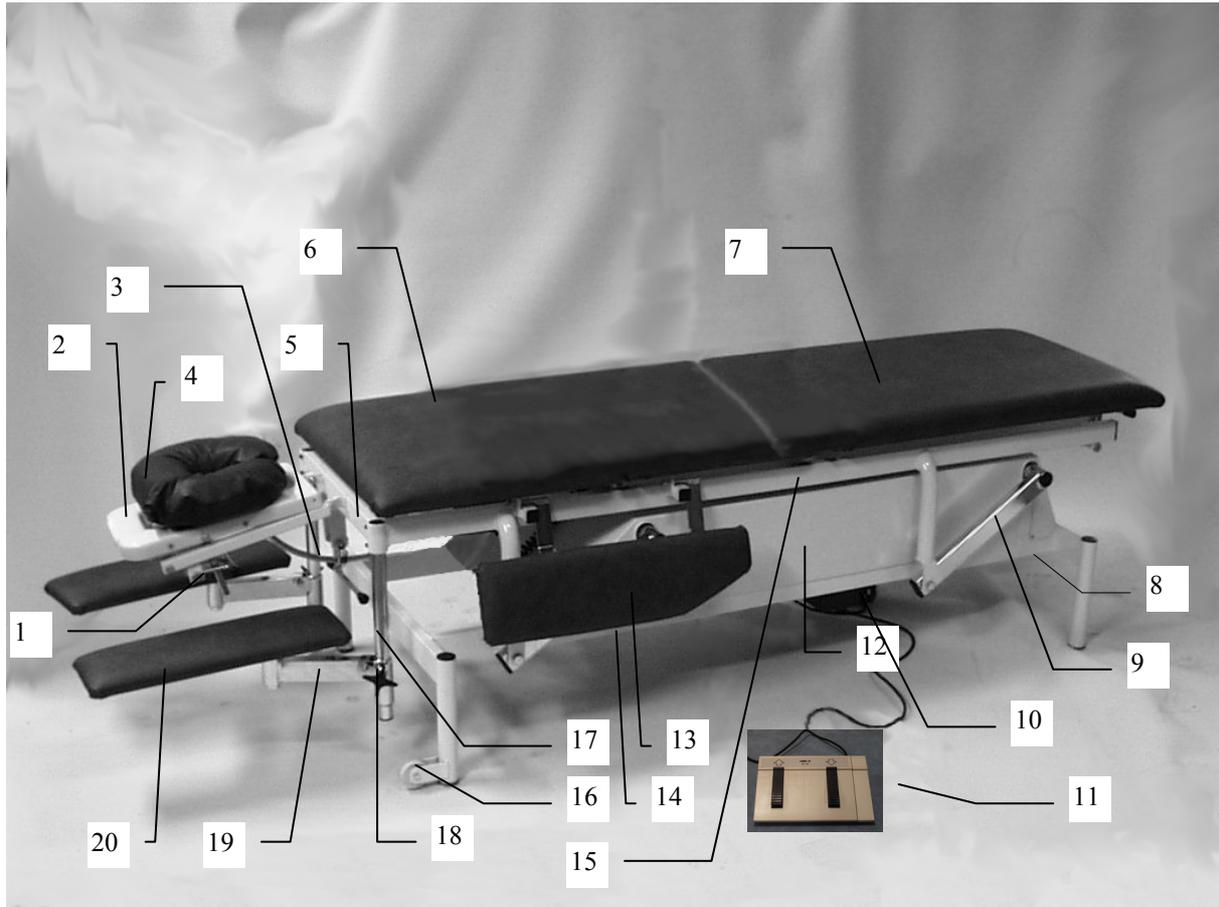

No.	Item
1	Locking of the horizontal position
2	Headrest
3	Locking of raising & lowering of the headrest
4	Cushion for the headrest
5	Space for extra hand control for height adjustment
6	Pad, front
7	Pad, rear
8	Frame
9	Lifting bow
10	Power supply
11	Feet pedal
12	Protective plastic cover
13	Side flap
14	Motor, or hydraulic, for height adjustment
15	Lying pad
16	Transport castors
17	Attachments for arm rest holders
18	Locking device for arm rests
19	Arm rest holder
20	Arm rest pad
21	Locking castors
22	Foot pedal for locking of central locking castors
23	Central locking castors
24	Paper roll holder
25	Gas spring adjuster
26	Gas spring
27	Gas spring attachment

II. Description of functions

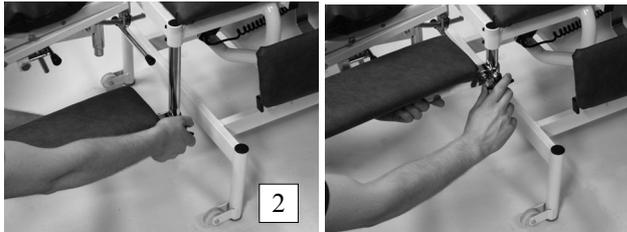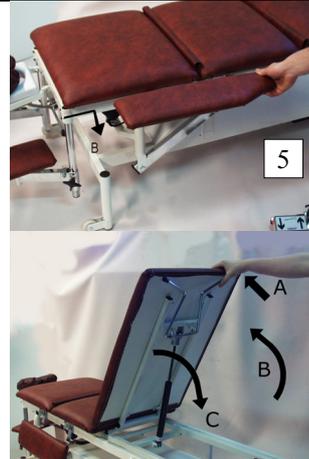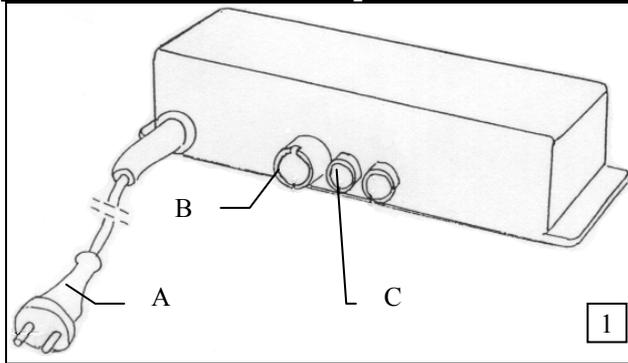

1. Connections for the motors and the wall socket.


A) Plug for wall socket

B) Foot pedal

C) Lifting motor



2-3. The adjustable arm rests are to be mounted on the chromed pipes. **NOTE! Don't screw on the locking handle when the fastener is not mounted on the pipe. The metal on the expansion function might be damaged.** The armrests are regulated both in height and side with a handle and an expansion locking for soft and efficient locking.

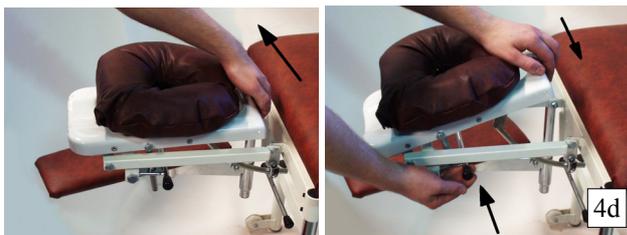

NOTE! Do not overload the armrests. They are only intended for support of patient's arms and hands during treatment.



3

4. The headrest is regulated both in height and horizontal by a locking device.

A. To raise the headrest, lift it upwards.

B. To lower it, lift the locking device and push the headrest gently downwards.

C. To raise the horizontal position, lift closest to the bench.

D. To lower the horizontal position, lift the locking device and lower to desired position.



4b



4c

5. The cushion is movable along the headrest. If the patient's shoulders are to be still against the pads of the bench, the cushion is to be placed closed to the bench. Should the arms be hanging free from the bench, releasing the shoulder

joint, move the cushion forward on the headrest. The cushion could be placed in reverse position, if needed, to give extra support to patient lying on the back.



NOTE! The head rest is intended only for supporting the patient's head. Don't overload! Overloading may cause risk both to the patient and the product.

6-7. The side supports are adjusted according to pictures 6 and 7, (A and B).

NOTE! The hydraulically adjustable Physio does not have these side supports.



NOTE! Don't overload the side supports! They're only to be used for supporting the patient's arms and hands.

8. When adjusting the back support / leg part, press the handle for the gas spring (A) to desired position, up (B) and down (C).






NOTE! Don't overload the back support / leg part! It's only intended to support the back and legs and to stretch *m. iliopsoas*. Do NOT sit on the raised back support. Overloading may cause risk both to the patient and the product.

The electrically adjustable model:

9. To raise the couch, press the left button.

10. To lower the couch, press the right button.

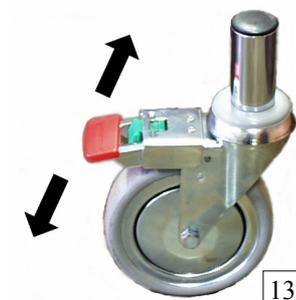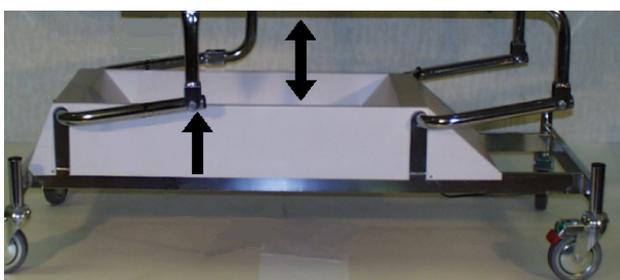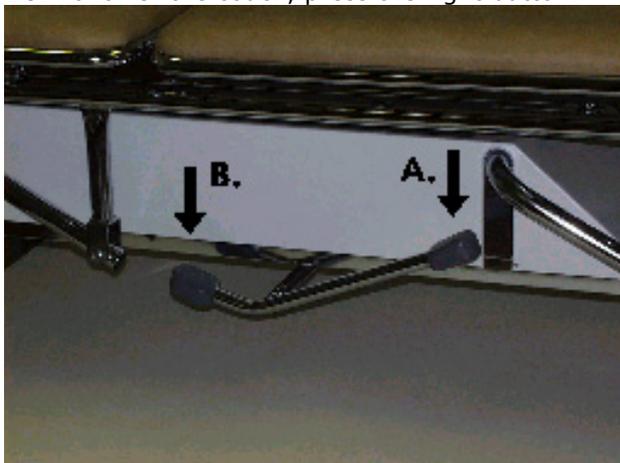

13



17

14

The hydraulically adjustable model:

A. Raising the couch

Press/pump the longer part of the pedal (A). Repeat the procedure until you reach desired height.

B. Lowering the couch:

Press/pump the shorter part of the pedal (B). Keep pressing until you reach the desired height.

11

 **NOTE! When adjusting the treatment couch up or down, there could be a risk of pinching (see arrows). Make sure that no one is within the working area.**

13. You lock the castors by pressing the red button ¹⁶ on the castor and release the locking device by pressing the green button.

12

14-15. Central-locking. Press the outside part of the double pedal for locking (see image 16). Release by pressing down the inside part (see image 17).

16. The pair of small castors, included as standard, is to be used as in picture 16. Lift in the frame, not the pad. The gas spring could be damaged if you lift in the pad.

17. Paper-roll holder. Unscrew the ball. Press the rod to the left. Lift and pull to the right. Mount the paper roll on the metal rod and do in reverse order to finish and lock.

III. Maintenance and cleaning

The treatment table is to be cleansed by using hot water and a light soap solution.

When disinfecting, please use **Hydrogenated Castor Oil Water**, or similar.


The treatment table is basically free from need of maintenance, but routine controls must be made to make sure that the table is fully functional.



Neglecting following routine control may give the couch a shorter life. Therefore, control all functions and details regularly.

Control following: castors and the locking device, the functions of the electric motor and the hydraul, and check for unusual sounds.

Lubricate according to schedule each sixth month.

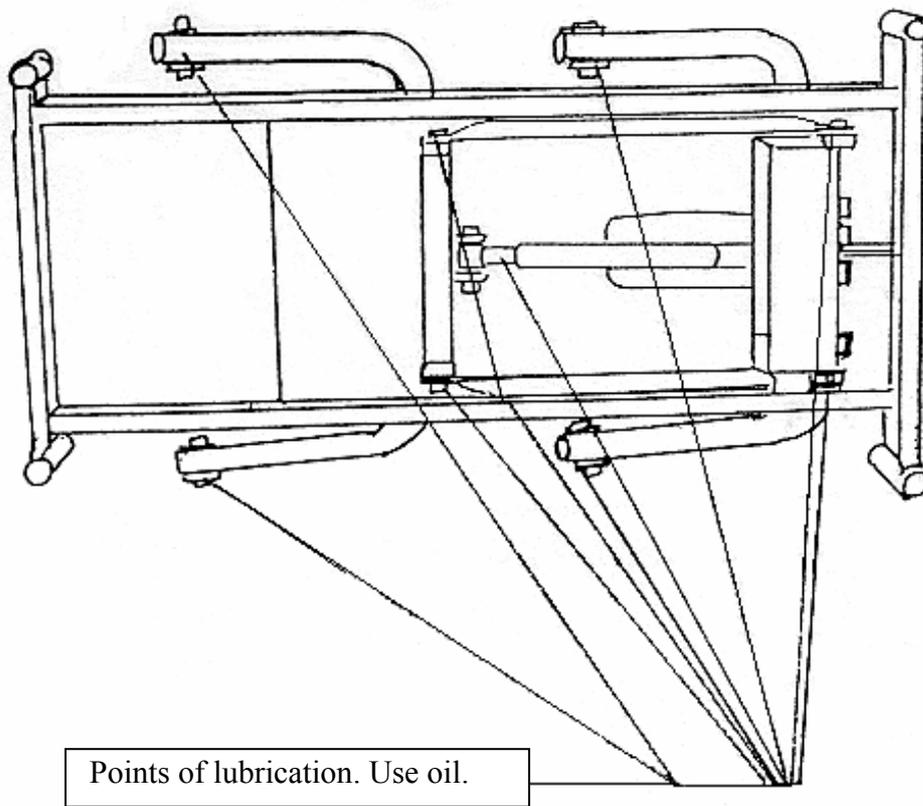

If service is needed, please contact ■tarsus■ tel +46 660 842 51.

IV. Description, technical documentation

Models

The couch is electrically or hydraulically adjustable.

Frame

All-welded white epoxy coated. Electrically or hydraulically adjustable in height. Motor and hydraul underneath hard plastic cover.

Lying frame

All-welded white epoxy coated tubes.

Motor

Linak LA31

Castors

- A pair of small castors. Standard castors: 2 pcs. 50 mm.
- Four locking castors, 75 or 125 mm.
- Central locking castors: 125 mm.

Hydraul

Römheld Nr 8921-500-406

Measure and weight

Measure

Adjustable in height: 50-88 cm.

Length: 200 cm

Width: 45-70 cm (electric model 45-60 cm).

Weight

55 kg

Lifting capacity

160 kg

V. Exchange of components

Changing electric motor or hydraul



NOTE! Before changing motors our power supply, you **MUST** pull the cord from the wall socket.

Changing lifting motor LINAK LA31 (raising and lowering the couch).



NOTE! When you change the motor, there is a risk that the couch falls to lowest position very fast. Therefore the couch must be lying down sidewise during change to avoid damage from crushing or pinching.

1. Place the couch on the side.
2. Unplug the banana plug from the power supply CB09.


3. Unscrew the M10 bolt.
4. Change the motor.
5. Mount in opposite order.

Changing the hydraul



WARNING! When you change the hydraul, there is a risk that the couch falls to lowest position very fast. Therefore the couch must be lying down sidewise during change to avoid damage from crushing or pinching.

1. Place the couch on the side.
2. Unscrew the M10 bolt.
3. Unscrew the M8 bolt.
4. Eject the M8 bolt from the pedal.
5. Loosen the M12 nut on the hydraul and remove the M12 bolt.
6. Change the hydraul and mount in reverse order.

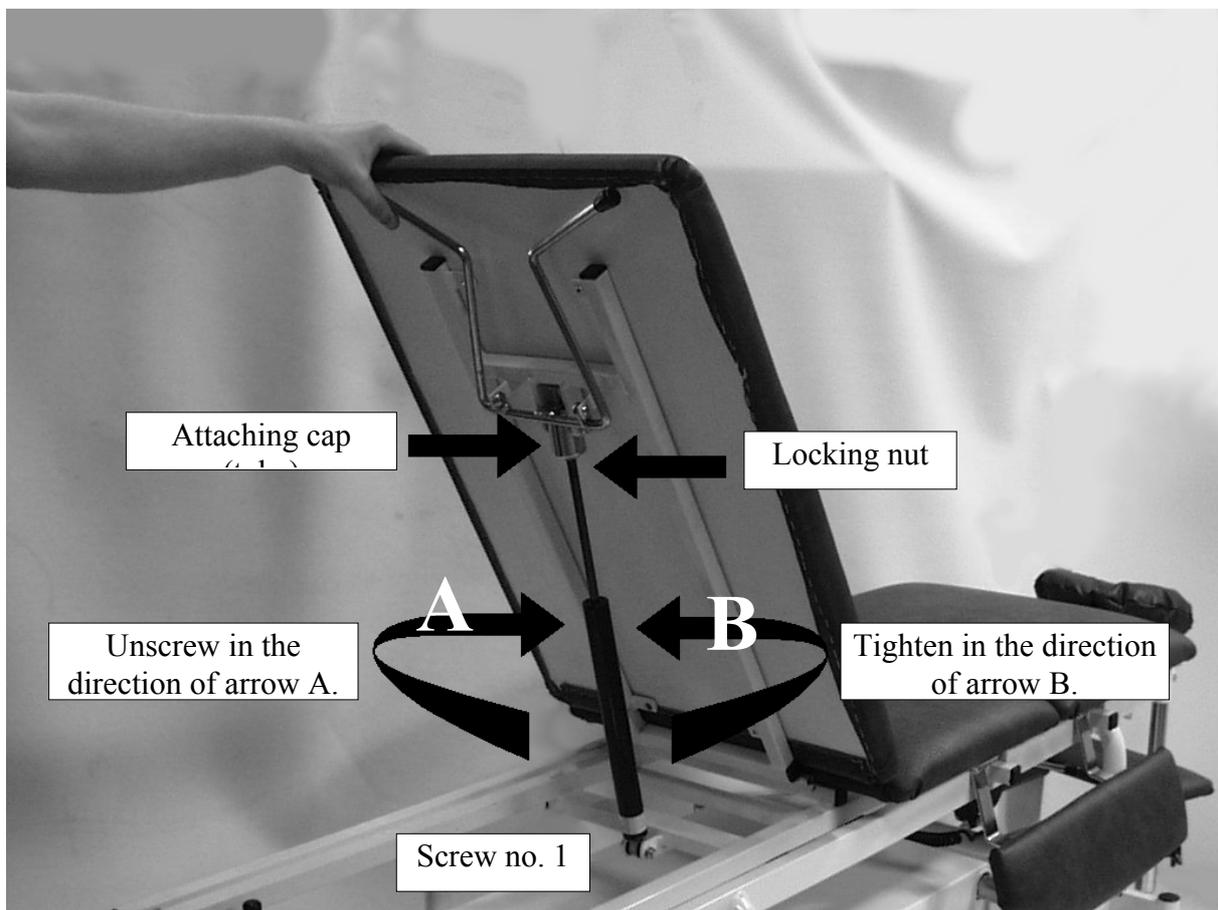

Exchanging the gas spring for the back rest



Caution! Note that the back rest / lying sheet will fall all the way down when the gas spring is removed. Have someone else holding the backrest or place the couch on its side.

- A) Loosen and remove screw no. 1
- B) Loosen the locking nut and twist the gas spring (the black part) left-wise and remove it from the tube.
- C) Mount the new gas spring into the attaching cap. Note that the gas spring must be fully tightened and locked with the locking nut for the handle to be able to maneuver the gas spring.
- D) Screw on screw no. 1.
- E) DONE!



Address

**Myrängsvägen 8
89150 Örnsköldsvik, SWEDEN**

Phone

+46 660 842 51

Fax

+46 660 180 00